


CORE ACCEPTANCE CRITERIA RACKS

Mounting points must not be cracked or damaged

Housing to be free from dents, cracks, and accident damage. Rack to be complete with no missing components or any part dismantled


Rack ends must not be bent or missing

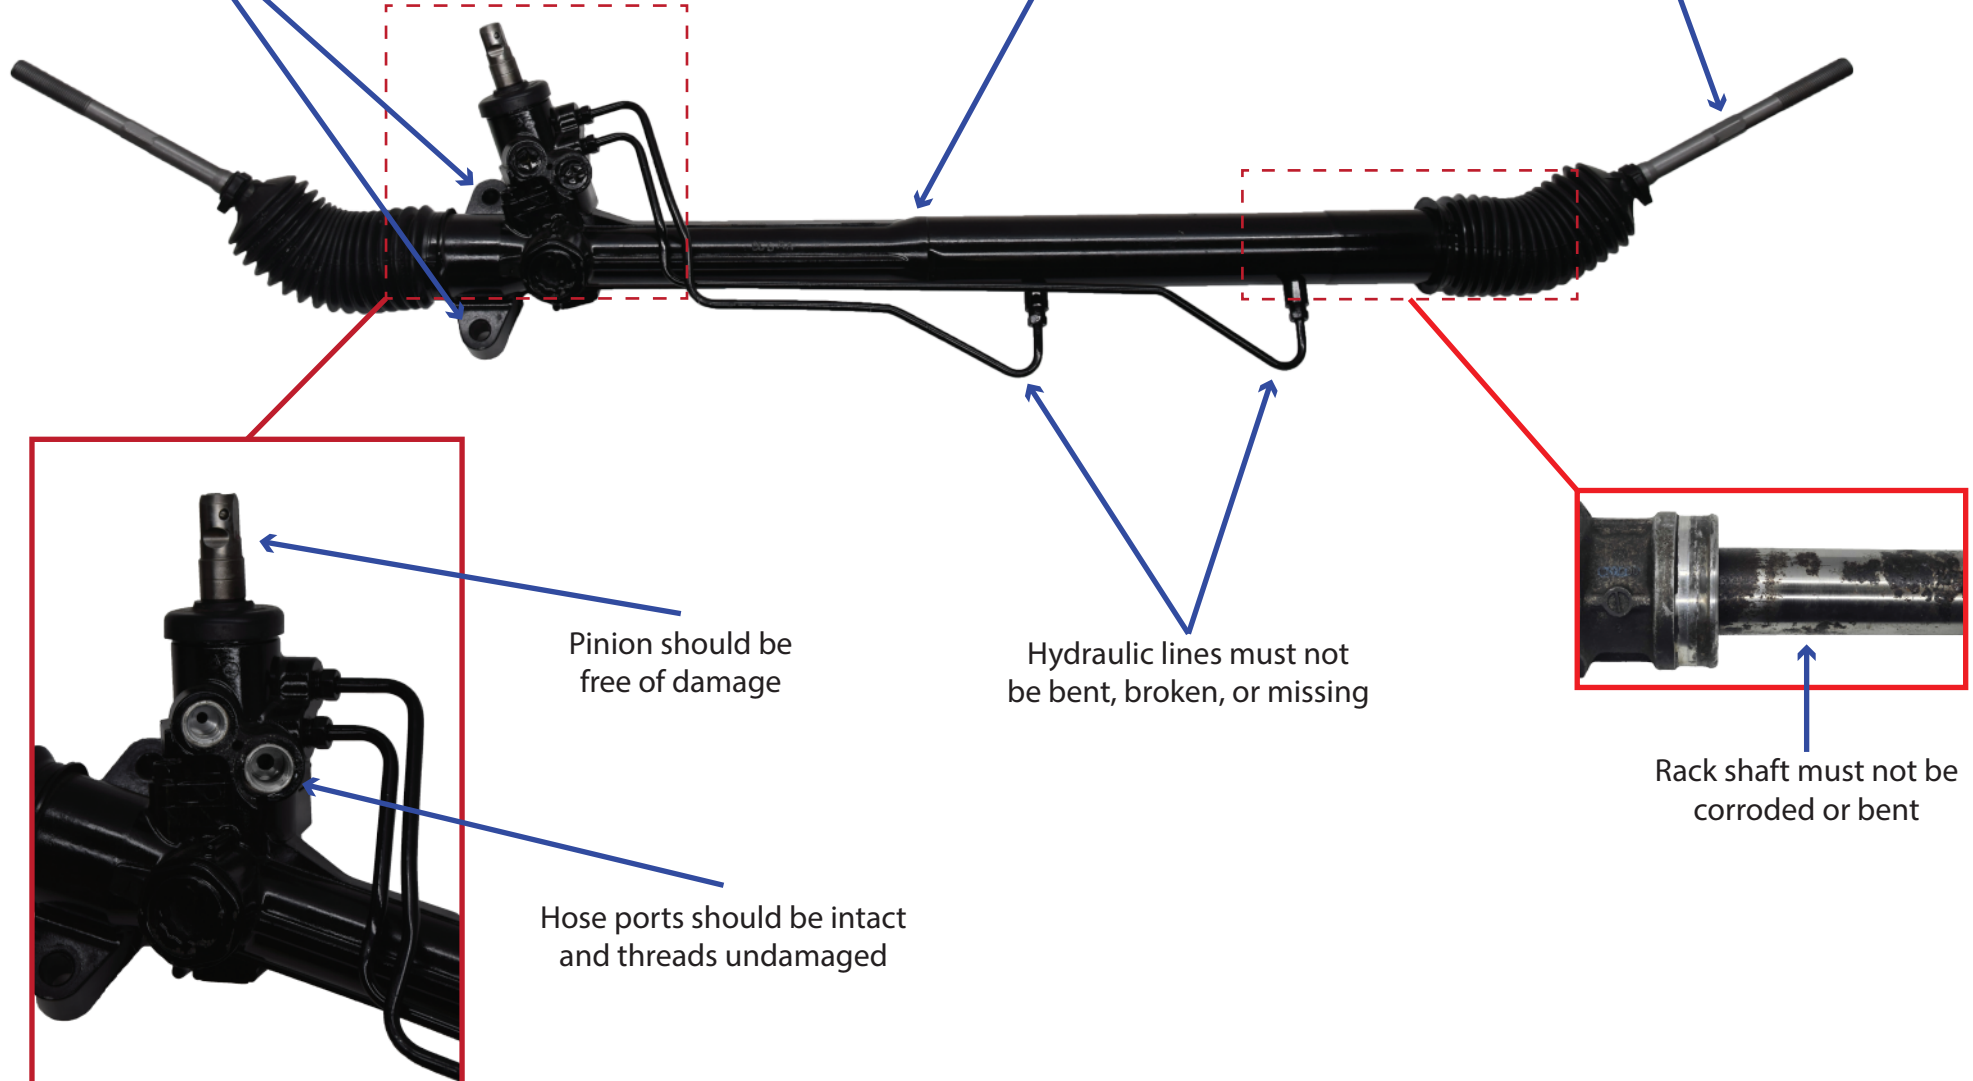

****If your core is an aftermarket unit or has any of these defects, please contact our sales team before purchasing an exchange unit****

CORE ACCEPTANCE CRITERIA PUMPS

Ports must be free from cracks
and threads undamaged

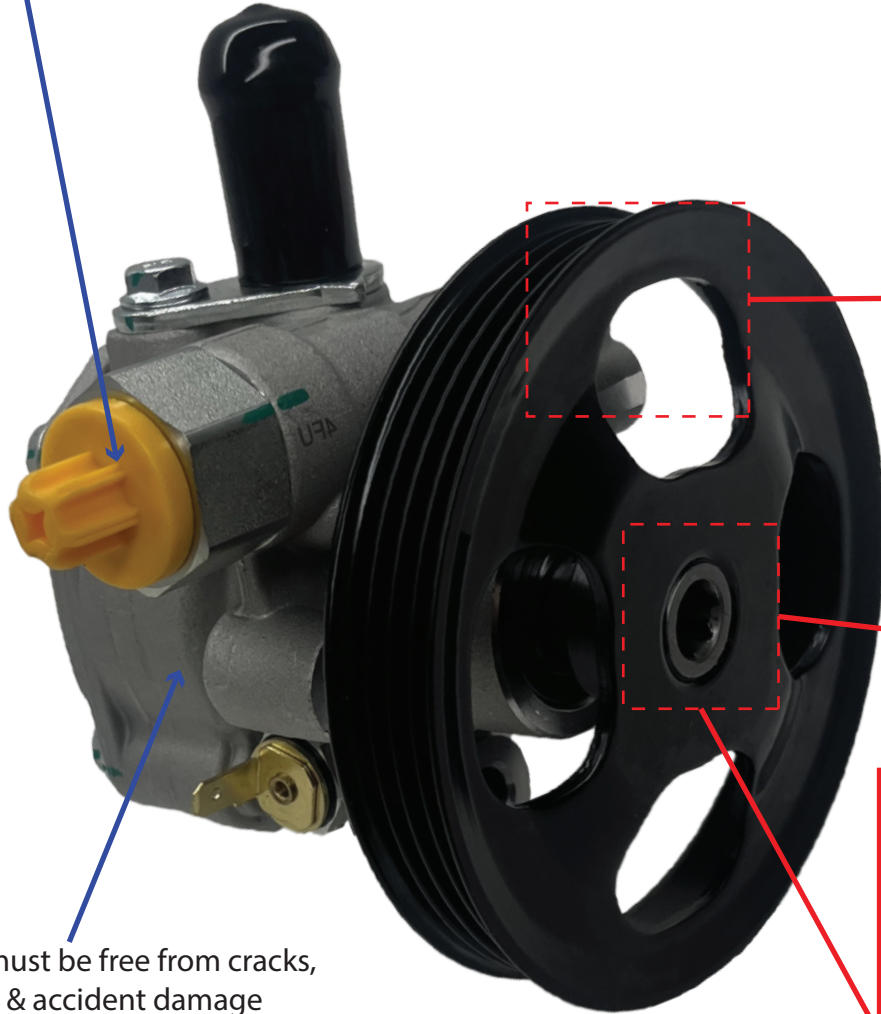


Housing must be free from cracks,
dents, & accident damage



Pulley must be straight and
free from cracks & bends




Shaft must not be bent
or damaged

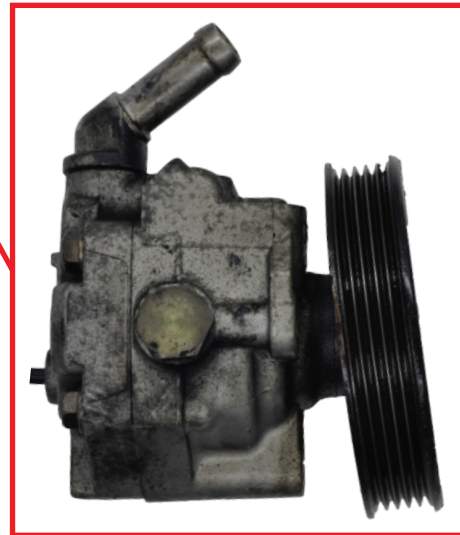


****If your core is an aftermarket unit or has any of these defects, please contact our sales team before purchasing an exchange unit****

CORE ACCEPTANCE CRITERIA BOXES



No damage from using
incorrect tools

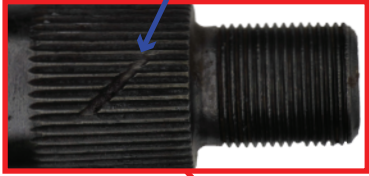

Housing must be free from cracks,
dents, & accident damage

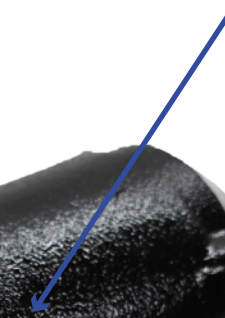


Ports must be free from cracks
and threads undamaged

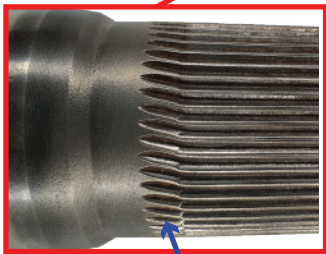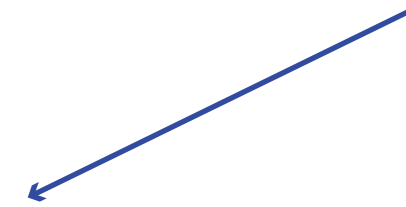

Sector shaft splines should be
straight and not twisted

Mounting points must be free from
cracks, damage, and modification

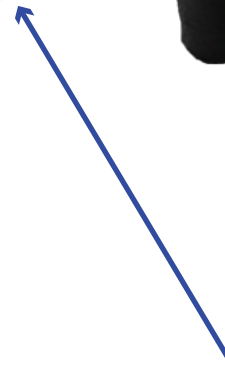

****If your core is an aftermarket unit or has any of these defects, please contact our sales team before purchasing an exchange unit****