

Tamago® PAN MEE Egg Processing Machine User Guide

Tamago® 板面蛋烹調機使用說明

- 1. Put the eggs into the machine (1-50 eggs) for TC-PME-50, (1-100 eggs) for TC-PME-100.**
將蛋放入機器 TC-PME-50 (1-50 個), TC-PME-100 (1-100 個)。
 - 2. Fill up the machine with room temperature water until the level indicated.**
把清水裝入機內至所指示的水位。
 - 3. Put the cover on and then press button I followed by button II. LED light will turn red indicating the machine has started process.**
把蓋子蓋好, 接著按 I 鍵接著按 II 鍵。LED 燈會轉紅, 表示機器已開始運作。
 - 4. LED light will turn green when it's ready along with 30 seconds buzzer. At this moment, pan mee egg is ready to be served.**
當運行完畢, LED 燈會轉綠, 伴隨着 30 秒的信號聲。這時, 板面蛋就完成了。
- **The machine automatically switch to keep warm mode on when LED turns green, please leave the cover open while keeping warm.**
機器運行完畢會自動切換至保溫模式, 保溫時請把蓋子打開。
 - **If you use 55 grams or smaller egg and find the egg yolk is slightly over cooked, please DO NOT put the cover on when the machine is processing.**
如果用的是 55 克以下的蛋而且發現蛋黃有些許過熟, 請不要在機器運作時把蓋子蓋上。
 - **Refill the water back to slightly over the sensor if the water level dropped below the sensor.**
如果水位跌至感應器以下, 請把水位加回至些許超過感應器。
 - **If you wish to make another process, please take the balanced eggs out along with some water to keep the balanced eggs warm. When the new process is done, you then put the previous balanced back into the machine.**
如果需要再運行, 請把剩餘的蛋和少許的水一起取出。當新一次的運行完成後, 那你可以把之前剩餘的蛋放回機器裡。
 - **If the water still clean and clear, you can still use it for the new process although the water is warm.**
只要水還是乾淨的, 即使是溫的, 在新一次的運行您還是可以繼續使用。
 - **You must switch off the power before cleaning the machine.**
在清理機器之前您必須把電源關上。
 - **Please bear in mind that the freshness and the size consistency of the egg will affect the result.**
請時刻記得蛋的新鮮度和大小的一致性會影響雞蛋的成果。
 - **This machine require a minimum 6.5 ampere electric current to ensure the machine function properly, therefore it is suggested to use a single 13 ampere socket point which IS NOT shared with other machines. Please do also ensure that the 13 ampere electric current IS NOT looped through multiple sockets.**
這台機器需要最少 6.5 安培 (TC-PME-50); 8.5 安培 (TC-PME-100) 的電流來保持正常運作, 因此建議使用不與其他機器公用的單個 13 安培的插座。另也請確保這 13 安培的電流沒有環路至多個插座。